

INTRODUCTION

Thank you for purchasing the SHARP Scientific Calculator Model EL-501X.

About the calculation examples (including some formulas and tables), refer to the reverse side of this English manual. Refer to the number on the right of each title on the manual for use.

After reading this manual, store it in a convenient location for future reference.

Operational Notes


- Do not carry the calculator around in your back pocket, as it may break when you sit down. The display is made of glass and is particularly fragile.
- Keep the calculator away from extreme heat such as on a car dashboard or near a heater, and avoid exposing it to excessively humid or dusty environments.
- Since this product is not waterproof, do not use it or store it where fluids, for example water, can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.
- Clean with a soft, dry cloth. Do not use solvents or wet cloth. Avoid using a rough cloth or anything else that may cause scratches.
- Do not drop it or apply excessive force.
- Never dispose of batteries in a fire.
- Keep batteries out of the reach of children.
- This product, including accessories, may change due to upgrading without prior notice.

SHARP will not be liable nor responsible for any incidental or consequential economic or property damage caused by misuse and/or malfunctions of this product and its peripherals, unless such liability is acknowledged by law.

- Press the RESET switch (on the front), with the tip of a ball-point pen or similar object, only in the following cases. Do not use an object with a breakable or sharp tip. Note that pressing the RESET switch erases all data stored in memory.
 - When using for the first time
 - After replacing the batteries
 - To clear all memory contents
 - When an abnormal condition occurs and all keys are inoperative.


If service should be required on this calculator, use only a SHARP servicing dealer, SHARP approved service facility, or SHARP repair service where available.

Hard Case

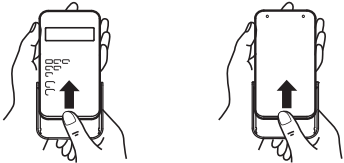

Coordinate Conversions [9]

- Before performing a calculation, select the angular unit.



BINARY, OCTAL, DECIMAL, AND HEXADECIMAL OPERATIONS (N-BASE) [10]

This calculator can perform the four basic arithmetic operations, calculations with parentheses and memory calculations using binary, octal, decimal, and hexadecimal numbers.

When performing calculations in each system, first set the calculator in the desired mode before entering numbers. It can also perform conversions between numbers expressed in binary, octal, decimal and hexadecimal systems.

Conversion to each system is performed by the following keys:

- [2ndF] [BIN]**: Converts to the binary system. "BIN" appears.
- [2ndF] [OCT]**: Converts to the octal system. "OCT" appears.
- [2ndF] [HEX]**: Converts to the hexadecimal system. "HEX" appears.
- [2ndF] [DEC]**: Converts to the decimal system. "BIN", "OCT", and "HEX" disappear from the display.

Conversion is performed on the displayed value when these keys are pressed.

Note: In this calculator, the hexadecimal numbers A - F are entered by pressing **[Exp]**, **[y^x]**, **[√]**, **[DEG]**, **[ln]**, and **[log]**, and displayed as follows:

$$A \rightarrow \beta, B \rightarrow b, C \rightarrow \ell, D \rightarrow d, E \rightarrow \ell, F \rightarrow f$$


In the binary, octal, and hexadecimal systems, fractional parts cannot be entered. When a decimal number having a fractional part is converted into a binary, octal, or hexadecimal number, the fractional part will be truncated. Likewise, when the result of a binary, octal, or hexadecimal calculation includes a fractional part, the fractional part will be truncated. In the binary, octal, and hexadecimal systems, negative numbers are displayed as a complement.

COMPLEX NUMBER CALCULATIONS [11]

To carry out addition, subtraction, multiplication, and division using complex numbers, press **[2ndF] [CPLX]** to select the complex number mode.

- A complex number is represented in the a + bi format. The "a" is the real part while the "bi" is the imaginary part. When inputting the real part, after inputting the number press **[a]**. When inputting the imaginary part, after inputting the number press **[b]**. To obtain the result press **[=]**.
- Immediately after completing calculation, you can recall the value of the real part with **[a]**, and the value of the imaginary part with **[b]**.
- If the complex numbers are represented as polar coordinates, press **[2ndF] [→y]** after they are input with **[a]** and **[b]**.

DISPLAY

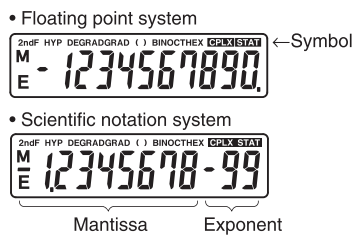

(During actual use not all symbols are displayed at the same time.) If the value of mantissa does not fit within the range ±0.00000001 - ±9999999999, the display changes to scientific notation. The display mode can be changed according to the purpose of the calculation.

2ndF: Appears when **[2ndF]** is pressed, indicating that the functions shown in orange are enabled.

HYP: Indicates that **[hyp]** has been pressed and the hyperbolic functions are enabled. If **[2ndF] [arc hyp]** are pressed, the symbols "2ndF HYP" appear, indicating that inverse hyperbolic functions are enabled.

DEG/RAD/GRAD: Indicates angular units and changes each time **[DRG]** is pressed. The default setting is DEG.

(): Appears when a calculation with parentheses is performed by pressing **[(]**.

BIN: Indicates that **[2ndF] [BIN]** has been pressed. Binary system mode is selected.

OCT: Indicates that **[2ndF] [OCT]** has been pressed. Octal system mode is selected.

HEX: Indicates that **[2ndF] [HEX]** has been pressed. Hexadecimal system mode is selected.

CPLX: Indicates that **[2ndF] [CPLX]** has been pressed. Complex number mode is selected.

STAT: Indicates that **[2ndF] [STAT]** has been pressed. Statistics mode is selected.

M: Indicates that a numerical value is stored in the independent memory.

E: Appears when an error is detected.

BEFORE USING THE CALCULATOR

Key Notation Used in this Manual

In this manual, key operations are described as follows:

- A** π To specify A (HEX): A
- Exp** To specify π : **[2ndF] [π]**
- To specify Exp: **[Exp]**

Functions that are printed in orange above the key require **[2ndF]** to be pressed first before the key. Numbers are not shown as keys, but as ordinary numbers.

Power On and Off

Press **[ON/C]** to turn the calculator on, and **[OFF]** to turn it off.

Clearing Numbers [11]

- Press **[ON/C]** to clear the entries except for a numerical value in the independent memory and statistical data.
- Press **[CE]** to clear the number entered prior to use of function key.
- In case of one digit correction of the entered number, press **[→]** (right shift key).

STATISTICAL CALCULATIONS [12]

Press **[2ndF] [STAT]** to select statistics mode. The following statistics can be obtained:

\bar{x}	Mean of samples (x data)
s.x	Sample standard deviation (x data)
σx	Population standard deviation (x data)
n	Number of samples
Σx	Sum of samples (x data)
Σx^2	Sum of squares of samples (x data)

Data Entry and Correction

Entered data are kept in memory until **[2ndF] [STAT]** or **[OFF]** are pressed. Before entering new data, clear the memory contents.

[Data Entry]

Data **[DATA]**
Data **[X]** frequency **[DATA]** (To enter multiples of the same data)

[Data Correction]

- Correction prior to pressing **[DATA]**: Delete incorrect data with **[ON/C]**.
- Correction after pressing **[DATA]**: Reenter the data to be corrected and press **[2ndF] [CD]**.
- The number displayed after pressing **[DATA]** or **[2ndF] [CD]** during data entry or correction is the number of samples (n).

Statistical Calculation Formulas [13]

- In the statistical calculation formulas, an error will occur when:
 - the absolute value of the intermediate result or calculation result is equal to or greater than 1×10^{100} .
 - the denominator is zero.
 - an attempt is made to take the square root of a negative number.

ERROR AND CALCULATION RANGES

Errors

An error will occur if an operation exceeds the calculation ranges, or if a mathematically illegal operation is attempted. In the case of an error, the display will show "E". An error can be cleared by pressing **[ON/C]**.

Calculation Ranges [14]

- Within the ranges specified, this calculator is accurate to ±1 of the least significant digit of the mantissa. However, a calculation error increases in continuous calculations due to accumulation of each calculation error. (This is the same for y^x , $x\sqrt{y}$, $n!$, e^x , \ln , etc., where continuous calculations are performed internally.) Additionally, a calculation error will accumulate and become larger in the vicinity of inflection points and singular points of functions.
- Calculation ranges
 - $\pm 10^{-99} \sim \pm 9.999999999 \times 10^{99}$ and 0.
- If the absolute value of an entry or a final or intermediate result of a calculation is less than 10^{-99} , the value is considered to be 0 in calculations and in the display.

Priority Levels in Calculation

This calculator performs operations according to the following priority:

- Functions such as sin, x^2 , and %
 - y^x , $x\sqrt{y}$
 - \times , \div
 - $+$, $-$
 - $=$, M+ and other calculation ending instruction
- Calculations which are given the same priority level are executed in sequence.
 - If parentheses are used, parenthesized calculations have precedence over any other calculations.
 - Parentheses can be continuously used up to 15 times unless pending calculations exceed 4.

INITIAL SET UP

Mode Selection

Normal mode: **[ON/C]**
Used to perform arithmetic operations and function calculations. **BIN**, **OCT**, **HEX**, **CPLX** and **STAT** are not displayed.

Binary, Octal, Decimal, or Hexadecimal system mode: **[2ndF] [BIN]**, **[2ndF] [OCT]**, **[2ndF] [DEC]** or **[2ndF] [HEX]**

Complex number mode: **[2ndF] [CPLX]**
Used to perform arithmetic operations with complex numbers. To clear this mode, press **[2ndF] [CPLX]**.

Statistics mode: **[2ndF] [STAT]**
Used to perform statistical calculations. To clear this mode, press **[2ndF] [STAT]**. When executing mode selection, statistical data will be cleared even when reselecting the same mode.

- By pressing **[OFF]** or Automatic power off function, the mode is cleared and returned to the normal mode.

Selecting the Display Notation and Decimal Places

- When calculation result is displayed in the floating point system, pressing **[F←E]** displays the result in the scientific notation system. Pressing **[F←E]** once more displays the result again in the floating point system.
- Pressing **[2ndF] [TAB]** and any value between 0 and 9 specifies the number of decimal places in the calculation result. To clear the setting of decimal places, press **[2ndF] [TAB]**.

10000÷3=	[ON/C] 10000 [÷] 3 [=]	33333.33333
[Floating point]	[2ndF] [TAB] 2	33333.33
[TAB set to 2]	[F←E]	3.33 04
→[Scientific notation]	[F←E] [2ndF] [TAB] 0	33333.33333
→[Floating point]		

- If the value for floating point system does not fit in the following range, the calculator will display the result using scientific notation system: $0.00000001 \leq |x| \leq 9999999999$

Determination of the Angular Unit

In this calculator, the following three angular units (degrees, radians, and grads) can be specified.



SCIENTIFIC CALCULATIONS

- Calculate in the normal mode.
- In each example, press **[ON/C]** to clear the display.

Arithmetic Operations [2]

- The closing parenthesis **)** just before **[=]** or **[M+]** may be omitted.
- When entering only a decimal place, it is not necessary to press **[0]** before **[.]**.

Constant Calculations [3]

- In the constant calculations, the addend becomes a constant. Subtraction and division are performed in the same manner. For multiplication, the multiplicand becomes a constant.

Functions [4]

- Refer to the calculation examples of each function.
- For most calculations using functions, enter numerical values before pressing the function key.

Random Numbers

A pseudo-random number with three significant digits can be generated by pressing **[2ndF] [RANDOM]**. Random number generation is not possible when binary/octal/hexadecimal system mode is set.

Angular Unit Conversions [5]

Each time **[2ndF] [DRG]** are pressed, the angular unit changes in sequence.

Memory Calculations [6]


- This calculator has one independent memory (M). It is available in the normal mode and binary, octal, hexadecimal system mode.
 - The independent memory is indicated by the three keys: **[STO]**, **[RCL]**, **[M+]**.
- Before starting a calculation, clear the memory by pressing **[ON/C]** and **[STO]**.
- A value can be added to or subtracted from an existing memory value. When subtracting a number from the memory, press **[+/-]** and **[M+]**.
- The contents of the memory are retained even when the calculator is turned off. A value stored in memory will thus remain until it is changed or until the batteries run out.

Chain Calculations [7]

This calculator allows the previous calculation result to be used in the following calculation. The previous calculation result will not be recalled after entering multiple instructions.

Time, Decimal and Sexagesimal Calculations [8]

This calculator performs decimal-to-sexagesimal conversion and sexagesimal-to-decimal conversion. In addition, the four basic arithmetic operations and memory calculations can be carried out using the sexagesimal system. Notation for sexagesimal is as follows:



Note: When the calculation or conversion result is converted, a residual may occur.

SPECIFICATIONS



Calculations:	Scientific calculations, binary/octal/hexadecimal number calculations, complex number calculations, statistical calculations, etc.
Internal calculations:	Mantissas of up to 12 digits
Pending operations:	4 calculations
Power source:	3V \approx (DC): Alkaline batteries (LR1130 or equivalent) \times 2
Operating time:	Approx. 1800 hours when continuously displaying 55555. at 25°C (77°F). Varies according to use and other factors.
Operating temperature:	0°C - 40°C (32°F - 104°F)
External dimensions:	75 mm (W) \times 144 mm (D) \times 10 mm (H) 2-15/16" (W) \times 5-21/32" (D) \times 13/32" (H)
Weight:	Approx. 73g (0.17 lb) (including batteries)
Accessories:	Batteries \times 2 (installed), operation manual, and hard case

FOR MORE INFORMATION ABOUT SCIENTIFIC CALCULATOR

Visit our Web site.
<http://sharp-world.com/calculator/>

Replacement Procedure

- Turn the power off by pressing **[OFF]**.
 - Remove two screws. (Fig. 1)
 - Lift the battery cover to remove.
 - Remove the used batteries then replace with two fresh batteries with the positive sides (+) facing up. (Fig. 2)
 - Replace the battery cover and screws.
 - Press the RESET switch (on the front).
- Make sure that the display appears as shown below. If the display does not appear as shown, reinstall the batteries and check the display once again.



Automatic Power Off Function

This calculator will turn itself off to save battery power if no key is pressed for approximately 7 minutes.

EL-501X

CALCULATION EXAMPLES
EXEMPLES DE CALCUL
ANWENDUNGSBEISPIELE
EJEMPLOS DE CÁLCULO
ESEMPLI DI CALCOLO
REKENOVORBEELDEN
PÉLDASZÁMÍTÁSOK
PŘÍKLADY VÝPOČTŮ
RÄKNEEHEMPEL
LASKENTAESIMERKKEJÄ
ПРИМЕРЫ ВЫЧИСЛЕНИЙ
UDREGNINGSEKSEMPLER
ตัวอย่างการคำนวณ
نماذج للحسابات
计算例子
CONTOH-CONTOH PENGHITUNGAN
CONTOH-CONTOH PERHITUNGAN
CÁC VÍ DỤ PHÉP TÍNH

[1] ON/C CE → !

3x	3 (X)	3.
4x5	4 (X) 5	5.
4x6+7	6 (+) 7 (=)	31.
134	134	134.
123	→ →	1.
3 ⁴ →4 ³	3 (y ^x) 4 (2ndF) (↑) (=)	64.

[2] + - × ÷ () +/- Exp

45+285+3	ON/C 45 (+) 285 (÷) 3 (=)	140.
18+6	() 18 (+) 6 () (÷)	
15-8	() 15 (-) 8 (=)	3.428571429
42x(-5)+120	42 (X) 5 (+/-) (+) 120 (=)	-90.
(5x10 ³)÷(4x10 ⁻³)	5 (Exp) 3 (÷) 4 (Exp) 3 (+/-) (=)	1250000.

[11] CPLX a b →rθ →xy

(12-6i) + (7+15i) = 12 (a) 6 (+/-) (b) (+) 7 (a) 15 (b) = 8. 5.

6x(7-9i) x (-5+8i) = 6 (a) (X) 7 (a) 9 (+/-) (b) (X) 5 (+/-) (a) 8 (b) (=) = 222. 606.

16x(sin30°+icos30°) = 16 (a) (X) 30 (sin) (a) 30 (cos) (b) (÷) 60 (sin) (a) 60 (cos) (b) (=) = 13.85640646 8.

8 (a) 70 (b) (2ndF) (→xy) (+) 12 (a) 25 (b) (2ndF) (→xy) = (2ndF) (→rθ) [r] (b) [θ]

18.5408873 42.76427608

r1 = 8, θ1 = 70°
r2 = 12, θ2 = 25°
r = ?, θ = ?°

(1 + i) ↓ (2ndF) (→rθ) [r] (b) [θ]

1. 1.414213562 45.

[12] STAT DATA CD X̄ Sx σx n Σx Σx²

DATA	2ndF (STAT)	0.
95	95 (DATA)	1.
80	80 (X) 2 (DATA)	3.
75	75 (X) 3 (DATA)	6.
75	50 (DATA)	7.

X̄ = 75.71428571
σx = 12.37179148
n = 7
Σx = 530
Σx² = 41200
sx = 13.3630621
sx² = 178.5714286

[3]

34+57=	34 (+) 57 (=)	91.
45-57=	45 (-)	102.
79-59=	79 (-) 59 (=)	20.
56-59=	56 (-)	-3.
56÷8=	56 (÷) 8 (=)	7.
92÷8=	92 (÷)	11.5
68x25=	68 (X) 25 (=)	1700.
68x40=	40 (=)	2720.

[4] sin cos tan sin⁻¹ cos⁻¹ tan⁻¹ π DRG hyp arc hyp ln log e^x 10^x 1/X X² √ y^x √y √y n! %

sin60° = ON/C 60 (sin) = 0.866025403

cos^π/₄ [rad] = DRG (2ndF) (π) (÷) 4 = cos = 0.707106781

tan⁻¹1=[g] = DRG 1 (2ndF) (tan⁻¹) (DRG) = 50.

(cosh 1.5 + sinh 1.5)² = ON/C () 1.5 (hyp) (cos) (+) 1.5 (hyp) (sin) () (X²) = 20.08553692

tanh⁻¹5/7 = 5 (÷) 7 (=) (2ndF) (arc hyp) (tan) = 0.895879734

ln 20 = 20 (ln) = 2.995732274

log 50 = 50 (log) = 1.698970004

e³ = 3 (2ndF) (e^x) = 20.08553692

10^{1.7} = 1.7 (2ndF) (10^x) = 50.11872336

1.1/6.7 = 6 (2ndF) (1/X) (+) 7 (2ndF) (1/X) (=) = 0.309523809

8⁻² - 3⁴x 5² = 8 (y^x) 2 (+/-) (-) 3 (y^x) 4 (X) 5 (X²) (=) = -2024.984375

(12³)⁴ = 12 (y^x) 3 (y^x) 4 (2ndF) (1/X) (=) = 6.447419591

√49 - √81 = 49 (√) (-) 81 (2ndF) (√y) 4 (=) = 4.

∛27 = 27 (2ndF) (√y) = 3.

4! = 4 (2ndF) (n!) = 24.

500x25% = 500 (X) 25 (2ndF) (%) (=) = 125.

120 ÷ 400 = %? = 120 (÷) 400 (2ndF) (%) (=) = 30.

500 + (500x25%) = 500 (+) 25 (2ndF) (%) (=) = 625.

400 - (400x30%) = 400 (-) 30 (2ndF) (%) (=) = 280.

STAT

DATA 2ndF (STAT) 2ndF (STAT) 0.

30 (DATA) 1.

40 (X) 2 (DATA) 3.

40 (DATA) 4.

50 (2ndF) (CD) 3.

40 (X) 2 (2ndF) (CD) 1.

DATA 30 45 45 45 60 45 (X) 3 (DATA) 4. 60 (DATA) 5.

[13] $\bar{x} = \frac{\sum x}{n}$ $\sigma_x = \sqrt{\frac{\sum x^2 - n\bar{x}^2}{n}}$

$s_x = \sqrt{\frac{\sum x^2 - n\bar{x}^2}{n-1}}$ $\Sigma x = x_1 + x_2 + \dots + x_n$ $\Sigma x^2 = x_1^2 + x_2^2 + \dots + x_n^2$

[14]

Function	Dynamic range
Fonction	Plage dynamique
Funktion	zulässiger Bereich
Función	Rango dinámico
Função	Gama dinâmica
Funzioni	Campi dinamici
Funcție	Rekencapaciteit
Függvény	Megengedett számítási tartomány
Funkce	Dynamický rozsah
Funktion	Definitionsområde
Funktio	Dynaaminen ala
Функция	Динамический диапазон
Funktion	Dynamikområde
ฟังก์ชัน	พิสัยในการคำนวณ
الدالة	النطاق الديناميكي
函数	取值范围
Fungsi	Julat dinamik
Fungsi	Kisaran dinamis
Hàm số	Giới hạn Động

sin x, tan x DEG: |x| ≤ 4.499999999 × 10¹⁰ (tan x : |x| ≠ 90 (2n-1))^{*} RAD: |x| ≤ 785398163.3 (tan x : |x| ≠ π/2 (2n-1))^{*} GRAD: |x| ≤ 4.999999999 × 10¹⁰ (tan x : |x| ≠ 100 (2n-1))^{*}

cos x DEG: |x| ≤ 4.500000008 × 10¹⁰ RAD: |x| ≤ 785398164.9 GRAD: |x| ≤ 5.000000009 × 10¹⁰

sin⁻¹x, cos⁻¹x |x| ≤ 1

tan⁻¹x, √x |x| < 10¹⁰⁰

ln x, log x 10⁻⁹⁹ ≤ x < 10¹⁰⁰

e^x -10¹⁰⁰ < x ≤ 230.2585092

10^x -10¹⁰⁰ < x < 100

sinh x, cosh x |x| ≤ 230.2585092

- The range of the results of inverse trigonometric functions
- Plage des résultats des fonctions trigonométriques inverses
- Der Ergebnisbereich für inverse trigonometrische Funktionen
- El rango de los resultados de funciones trigonométricas inversas
- Gama dos resultados das trigonométricas inversas
- La gamma dei risultati di funzioni trigonometriche inverse
- Het bereik van de resultaten van inverse trigonometrie
- Az inverz trigonometriai funkciók eredmény-tartománya
- Rozsah výsledků inverzních trigonometrických funkcí
- Ömfång för resultaten av omvända trigonometriska funktioner
- Käänteisten trigonometrinen funktioiden tulosten alue
- Диапазон результатов обратных тригонометрических функций
- Område for resultater af omvendte trigonometriske funktioner
- พิสัยของผลลัพธ์ของฟังก์ชันตรีโกณมิติกลับด้าน
- نطاق نتائج الدوال المثلثية العكسية
- 反三角函数计算结果的范围
- Julat hasil fungsi trigonometri songsang
- Kisaran hasil fungsi trigonometri inversi
- Giới hạn của các kết quả của các hàm số lượng giác nghịch đảo

	θ = sin ⁻¹ x, θ = tan ⁻¹ x	θ = cos ⁻¹ x
DEG	-90 ≤ θ ≤ 90	0 ≤ θ ≤ 180
RAD	-π/2 ≤ θ ≤ π/2	0 ≤ θ ≤ π
GRAD	-100 ≤ θ ≤ 100	0 ≤ θ ≤ 200

[5] DRG▶

90° → [rad] ON/C 90 (2ndF) (DRG▶) = 1.570796327
→ [g] (2ndF) (DRG▶) = 100.
→ [°] (2ndF) (DRG▶) = 90.

sin⁻¹0.8 = [°] 0.8 (2ndF) (sin⁻¹) = 53.13010235
→ [rad] (2ndF) (DRG▶) = 0.927295218
→ [g] (2ndF) (DRG▶) = 59.03344706
→ [°] (2ndF) (DRG▶) = 53.13010235

[6] RCL STO M+

24 ÷ (8x2) = 24 (÷) (RCL) (=) = 1.5
(8x2)x5 = (RCL) (X) 5 (=) = 80.

ON/C (STO) 12 (+) 5 (=) (M+) = 17.
→ 2+5 = 2 (+) 5 (=) (+/-) (M+) = -7.
+12x2 = 12 (X) 2 (=) (M+) = 24.
M (RCL) = 34.

\$1 = ¥140 140 (STO) = 140.
¥33,775 = \$? 33775 (÷) (RCL) (=) = 241.25
\$2,750 = ¥? 2750 (X) (RCL) (=) = 385000.

r = 3cm 3 (STO) = 3.
πr² = ? (2ndF) (π) (X) (RCL) (X²) (=) = 28.2743388

[7]

6+4=ANS ON/C 6 (+) 4 (=) = 10.
ANS+5 (+) 5 (=) = 15.

44+37=ANS 44 (+) 37 (=) = 81.
√ANS = √ (=) = 9.

[8] DEG DMS

12°39'18"05 ON/C 12.391805 (DEG) = 12.65501389
→ [10]

123.678 → [60] 123.678 (2ndF) (DMS) = 123.404080

sin62°12'24" = [10] 62.1224 (DEG) (sin) = 0.884635235

[9] a b →rθ →xy

ON/C 6 (a) 4 (b) (2ndF) (→rθ) [r] = 7.211102551
(x = 6, y = 4) (2ndF) (→xy) [x] = 33.69006753
(2ndF) (→xy) [y] = 7.211102551

14 (a) 36 (b) (2ndF) (→xy) [x] = 11.32623792
(r = 14, θ = 36°) (2ndF) (→xy) [y] = 8.228993532
(2ndF) (→xy) [x] = 11.32623792

[10] BIN OCT HEX DEC

DEC(25) → BIN ON/C (2ndF) (DEC) 25 (2ndF) (BIN) = 11001.

HEX(1AC) ON/C (2ndF) (HEX) 1AC = 110101100.
→ BIN (2ndF) (BIN) = 654.
→ OCT (2ndF) (OCT) = 428.
→ DEC (2ndF) (DEC)

BIN(1010-100) ON/C (2ndF) (BIN) () 1010 (-) 100 () x11 = (X) 11 (=) = 10010.

HEX(1FF)+ ON/C (2ndF) (HEX) 1FF (2ndF) (OCT) (+) = 512 (=) = 1511.
OCT(512)= 512 (=) = 349.
HEX(?) (2ndF) (HEX)

2FEC- ON/C (STO) (2ndF) (HEX) 2FEC (-) = 2C9E (=) = 34E.
2C9E=(A) 2009 (M+) = 34E.
+)2000- 2000 (-) = 6FF.
1901=(B) 1901 (M+) = A4d.
(C) (RCL) = 2637.
→ DEC (2ndF) (DEC)

Information on the Disposal of this Equipment and its Batteries

IF YOU WISH TO DISPOSE OF THIS EQUIPMENT OR ITS BATTERIES, DO NOT USE THE ORDINARY WASTE BIN! DO NOT PUT THEM INTO A FIREPLACE!

1. In the European Union

Used electrical and electronic equipment and batteries must be collected and treated SEPARATELY in accordance with law. This ensures an environment-friendly treatment, promotes recycling of materials, and minimizes final disposal of waste. Each household should participate! ILLEGAL DISPOSAL can be harmful to human health and the environment due to contained hazardous substances! THIS SYMBOL appears on electrical and electronic equipment and batteries (or the packaging) to remind you of that! If 'Hg' or 'Pb' appears below it, this means that the battery contains traces of mercury (Hg) or lead (Pb), respectively.

Take USED EQUIPMENT to a local, usually municipal, collection facility, where available. Before that, remove batteries. Take USED BATTERIES to a battery collection facility, usually a place where new batteries are sold. Ask there for a collection box for used batteries. If in doubt, contact your dealer or local authorities and ask for the correct method of disposal.

2. In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal. [ENGLISH]

For Canada only :
For warranty information, please see
<http://www.sharp.ca/en-CA/ForHome/HomeOffice/Calculator.aspx>

In U.S.A.:

LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to entore the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Your Product : Electronic Calculator
Warranty Period for this Product : One (1) year parts and labor from date of purchase.
Additional Items Excluded from Warranty Coverage : Any consumable items such as paper, maintenance cartridge, ink cartridges equipped with the Product or to any equipment or any hardware/software, firmware, fluorescent lamp, power cords, covers, rubber parts, or peripherals other than the Product.

Where to Obtain Service : At a Sharp Authorized Servicer located in the United States. To find out the location of the nearest Sharp Authorized Servicer, call Sharp toll free at 1-800-BE-SHARP.

What to do to Obtain Service : Ship (prepaid) or carry in your Product to a Sharp Authorized Servicer. Be sure to have proof of purchase available. If you ship or mail the Product, be sure it is packaged carefully.

For Australia / New Zealand only :
For warranty information please see www.sharp.net.au